

General Safety Information


WARNING – To avoid serious injuries:

- Improper use of your bicycle's brake system may result in a loss of control or an accident, which could lead to a severe injury. Because each bicycle may handle differently, be sure to learn the proper braking technique (including brake lever pressure and bicycle control characteristics) for your bicycle. Consult your bicycle dealer and the bicycle's owners manual, and practice your riding and braking technique.
- If the front brake is applied too strongly, the wheel may lock and the bicycle may fall forward, and serious injury may result.
- Brakes designed for use as rear brakes should not be used as front brakes.
- **Obtain and read the service instructions carefully prior to installing the parts.** Loose, worn or damaged parts may cause the bicycle to fall over and serious injury may occur as a result. We strongly recommend only using genuine Shimano replacement parts.
- Be careful not to allow any oil or grease to get onto the brake shoes. If any oil or grease do get on the shoes, you should replace the shoes, otherwise the brakes may not work correctly.
- Check the brake cable for rust and fraying, and replace the cable immediately if any such problems are found. If this is not done, the brakes may not work correctly.
- Always make sure that the front and rear brakes are working correctly before you ride the bicycle.
- The required braking distance will be longer during wet weather. Reduce your speed and apply the brakes early and gently.
- If the road surface is wet, the tires will skid more easily. If the tires skid, you may fall off the bicycle. To avoid this, reduce your speed and apply the brakes early and gently.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

CAUTION – To avoid serious injuries:

The power modulator is a device that makes it easier to control braking by increasing the cable stroke at the brake lever within a certain constant range of braking force. If the effective operating range of the power modulator will be exceeded, the lever stroke and the brake will operate as a normal V-BRAKE brake (sensitive and powerful). In that case, the brakes may operate more powerfully than intended and may cause the wheel to lock up. Therefore it is essential that you fully understand and test the performance of the power modulator before use. **The power modulator is not equipped with a function to prevent the wheel from locking up.**

Braking Performance Comparison

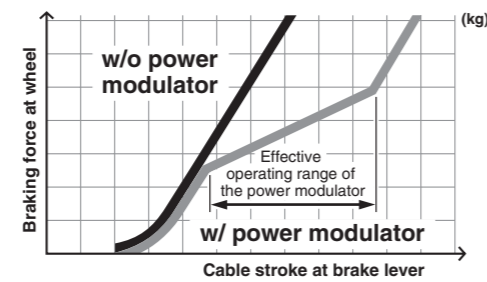

Shimano BR-T780 Safety Information

WARNING – To avoid serious injuries:

- If using the BL-T780 (3-finger brake levers) brake levers, use the SM-PM70 power modulator with the V-BRAKE brakes. If the power modulator is not used, it may cause excessive braking force to be applied when the brake lever is operated, which in turn could result in dangerous accidents.

NOTE:

- The optimum efficiency of the Multi-Condition Brake System can be realized by using the brakes and brake levers in the recommended set.
- If the brake shoes have worn down until the grooves are no longer visible, they should be replaced.
- Different brake shoes have their own characteristics. Ask the place of purchase for details when purchasing the brake shoes.
- Parts are not guaranteed against natural wear or deterioration resulting from normal use.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of handling or maintenance, please contact the place of purchase.

SI-8K30A-002

Multi-Condition Brake System

Technical Service Instructions

Multi-Condition Brake System


By providing superior wet weather braking performance (control and modulation), braking performance will not vary in a multitude of conditions when using this brake system.

In order to realize the best performance, we recommend that the following combination be used.

| | |
|---------------|----------------------|
| Series | DEORE XT |
| Brake lever | BL-T780 |
| V-BRAKE brake | BR-T780 with SM-PM70 |
| Brake cable | |

Installation of the brake lever

Secure the brake lever as shown in the illustration. (Check that the brake lever does not interfere with the shifting lever during operation. Refer to the Service Instructions for the shifting lever also. Some types might require the shifting lever to be installed first, due to the position of the shifting lever fixing bolts.)

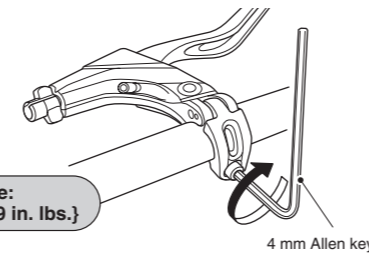


Tightening torque: 6 – 8 N·m {52 – 69 in. lbs.}

When installing the components to carbon frame/handle bar surfaces, verify with the manufacturer of the carbon frame/parts for their recommendation on tightening torque in order to prevent over tightening that can cause damage to the carbon material and/or under tightening that can cause lack of fixing strength for the components.



Installation of the V-BRAKE brake

1. Insert the stopper pin of the brake body into the center spring hole in the frame mounting boss, and then secure the brake body to the frame with the link fixing bolt.

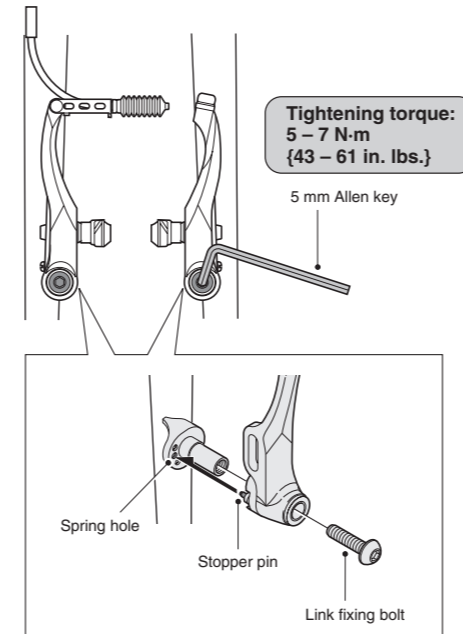


Tightening torque: 5 – 7 N·m {43 – 61 in. lbs.}

2. While holding the shoe against the rim, adjust the amount of shoe protrusion by changing over the washer B (thick or thin) so that dimension A is kept at 32 mm or more.

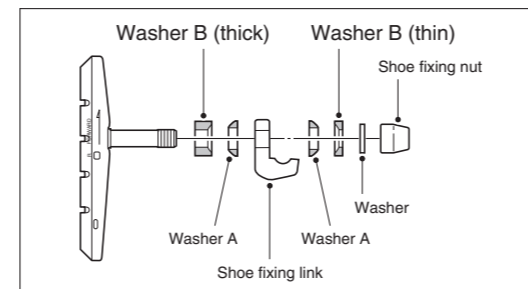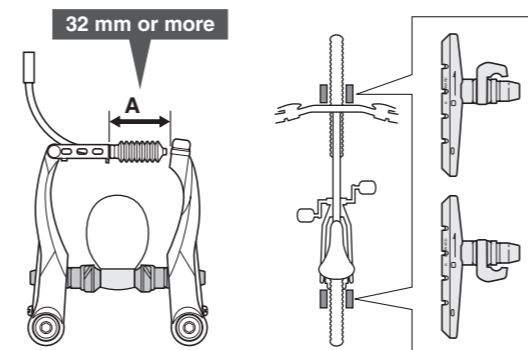


3. While holding the shoe against the rim, tighten the shoe fixing nut.

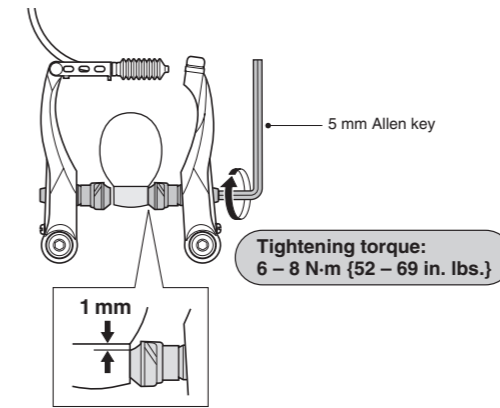


Tightening torque: 6 – 8 N·m {52 – 69 in. lbs.}

4. Pass the inner cable through the inner cable lead, and after setting so that the total of the clearances between the left and right shoes and the rim is 2 mm, tighten the cable fixing bolt.

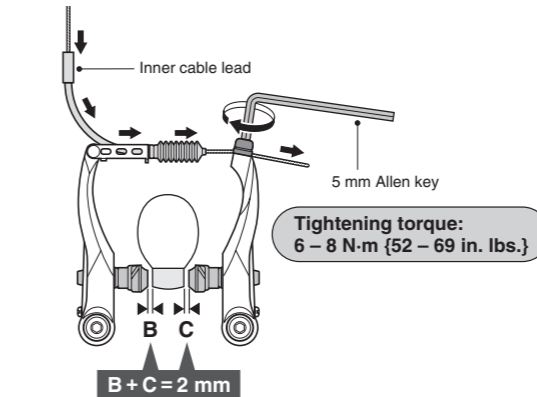


Tightening torque: 6 – 8 N·m {52 – 69 in. lbs.}

5. Adjust the balance with the spring tension adjustment screws.

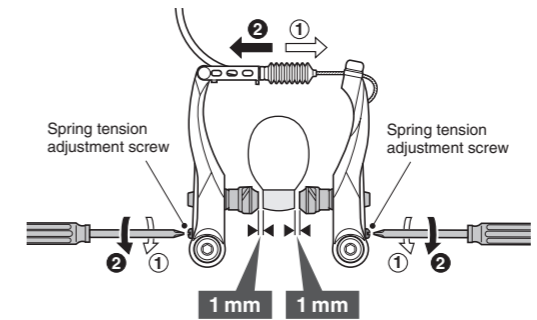


6. Depress the brake lever about 10 times as far as the grip and check that everything is operating correctly and that the shoe clearance is correct before using the brakes.

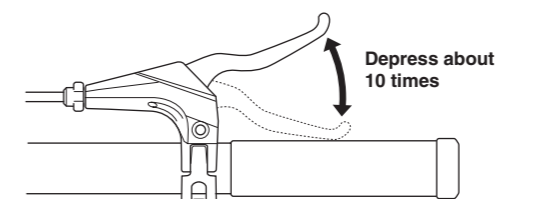

Replacement of the cartridge shoe


1. Remove the shoe fixing pin, and then slide the shoe along the groove to remove it from the shoe holder.

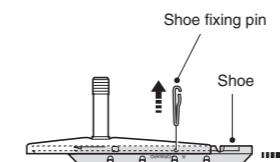

* Service Instructions in further languages are available at : <http://techdocs.shimano.com>

Please note: specifications are subject to change for improvement without notice. (English) © Apr. 2011 by Shimano Inc. XBC IZM Printed in Malaysia.



2. There are two different types of shoe and shoe holder to be used in the left and right positions respectively. Slide the new shoes into the grooves on the shoe holders while taking note of the correct directions and pin hole positions.

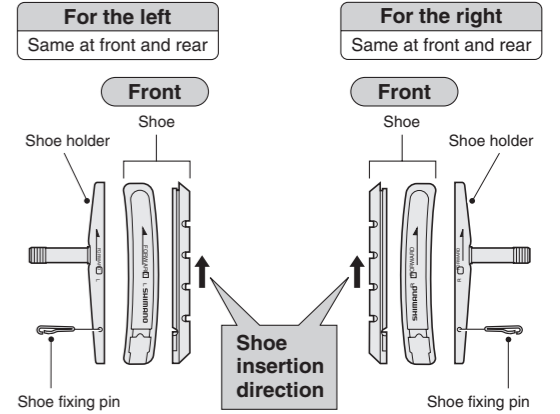

3. Insertion of shoe fixing pin is very critical to keep shoe properly fixed in place.

Installation of the SL-M780-I and the BL-T780

1. Use a 2 mm Allen key to open the clamp band of the brake lever as shown in the illustration.
2. Insert the hook of the shifting lever bracket into the hole in the brake lever bracket, and then provisionally tighten the special nut and special bolt to install it to the handlebar.

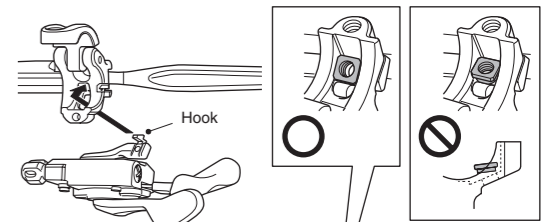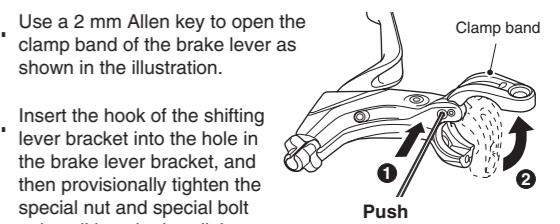

Note: Do not install the nut upside-down. If it is installed upside-down, it will not be possible to secure the brake lever to the handlebars, and damage may occur.

3. Use a 4 mm Allen key to secure the shifting lever to the brake lever.

Tightening torque: 4 N·m {35 in. lbs.}

4. Use a 4 mm Allen key to secure the clamp band of the brake lever.

Tightening torque: 6 – 8 N·m {52 – 69 in. lbs.}

SHIMANO

SHIMANO AMERICAN CORPORATION
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.
Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

SHIMANO INC.
3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japan